



OUTBACK MOTORCYCLES

Honda CRF 450L/RL

QUICK ASSEMBLY GUIDE | CRASH BARS

FOR FULL INSTALLATION INSTRUCTIONS, PLEASE WATCH [THIS VIDEO](#).


Tools Required

- 13mm Wrench/Spanner
- Ratchet + Extension
- 10mm Hex Socket
- 13mm Hex Socket
- Blue Loctite (recommended)


Number	QTY	Specifications	Torque (NM)
<u>1</u>	2	M8 x 140mm Hex Bolt	23
<u>2</u>	4	M8 x 25mm Hex Bolt	23
<u>3</u>	2	M8 x 20mm Hex Bolt	23
<u>4</u>	12	M8 Washer	-
<u>5</u>	4	M8 Nyloc Nut	-

* PLEASE REFER TO THE OWNER'S (OR SERVICE) MANUAL FOR OEM TORQUE SPECIFICATIONS.*


STEP 1:

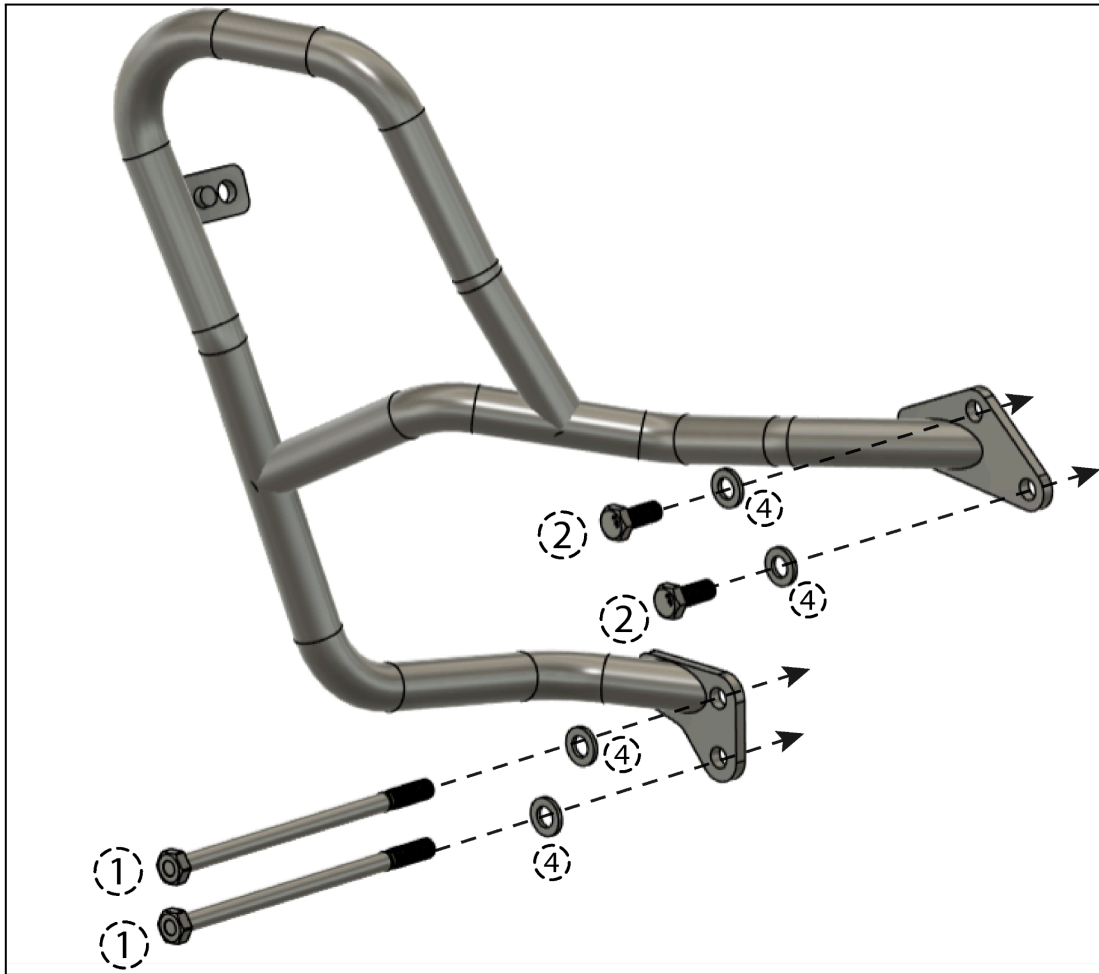

STEP 2:

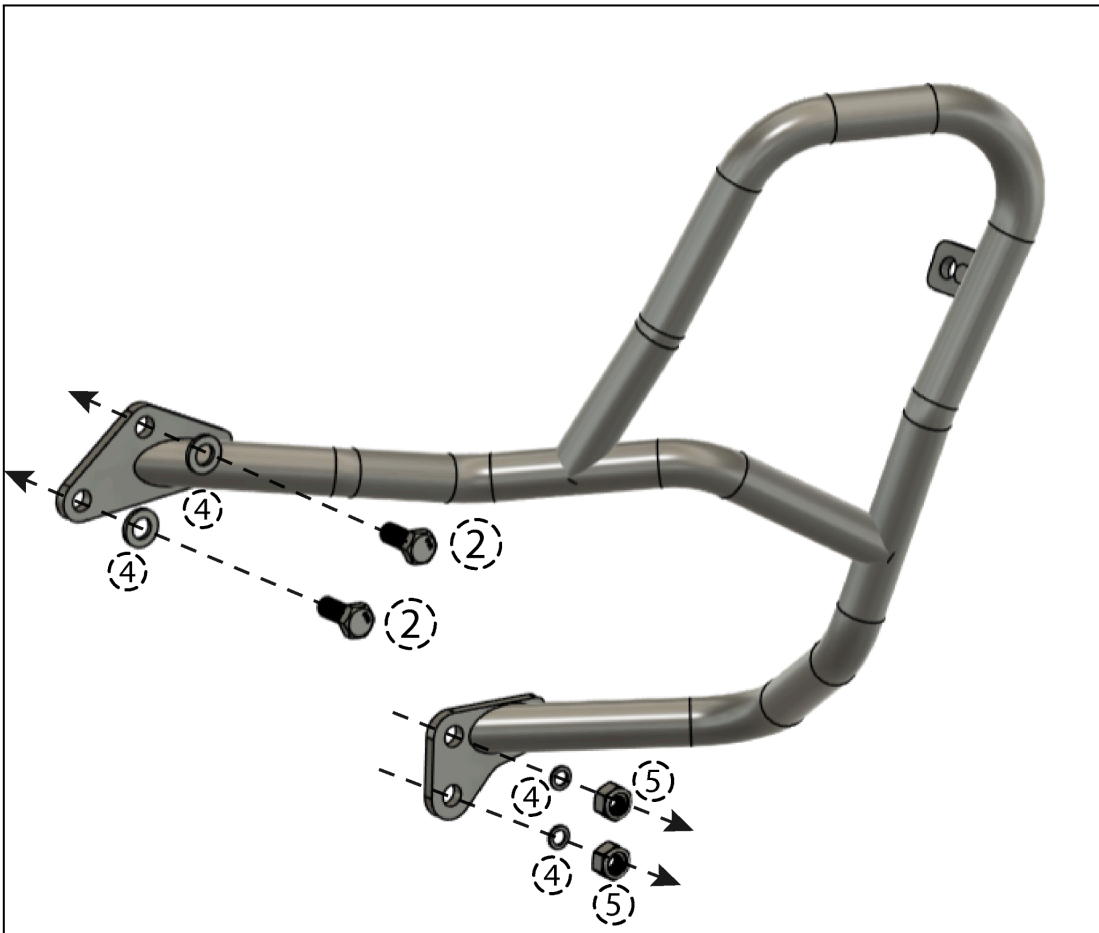

STEP 3:

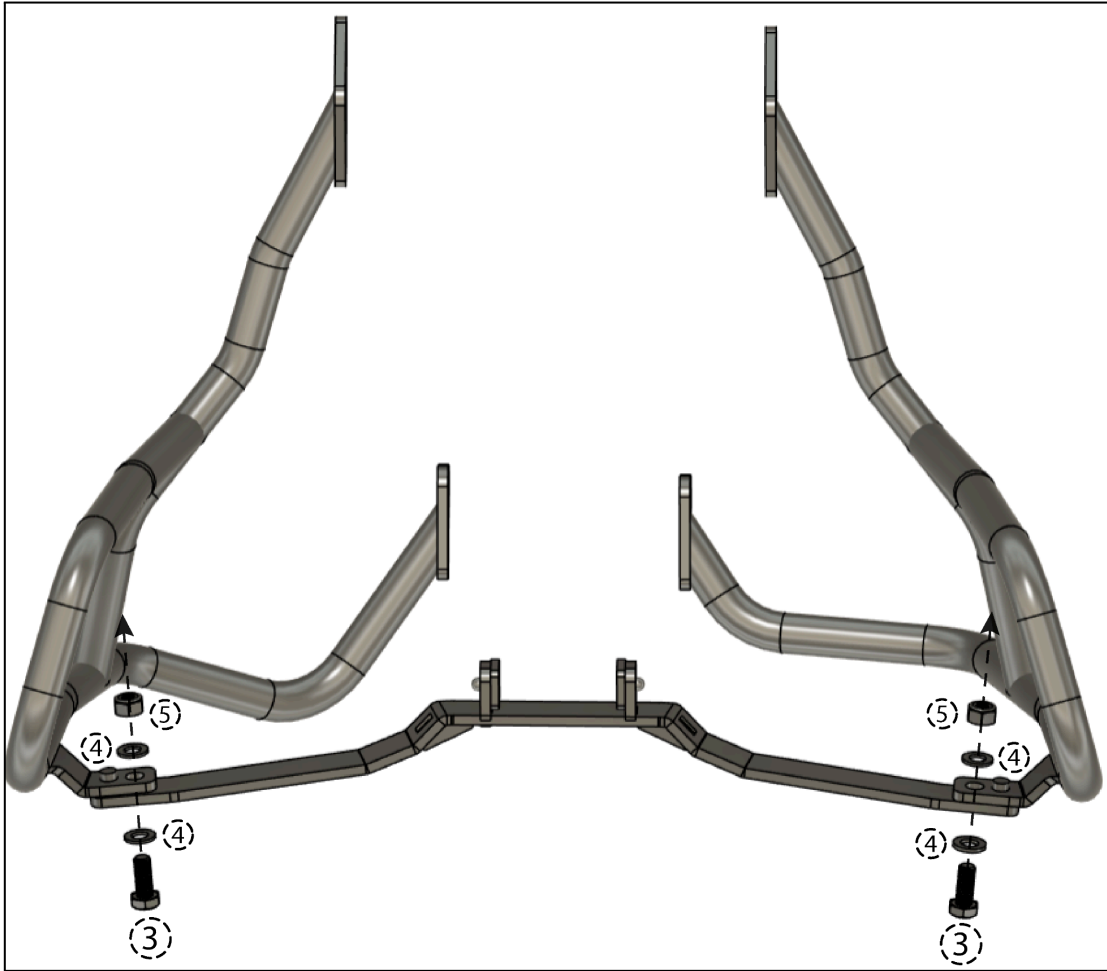

* PLEASE REFER TO THE OWNER'S (OR SERVICE) MANUAL FOR OEM TORQUE SPECIFICATIONS.*