



CULT INTERFACE MOTORCYCLES

2026 BMW F 450 GS

ASSEMBLY GUIDE | SKID PLATE


Tools Required

- ☐ Ratchet + Extension
- ☐ 5mm Allen Key / Hex Socket (*for M6 hardware*)
- ☐ 8mm Allen Key / Hex Socket (*for M10 hardware*)
- ☐ Torque Wrench (*recommended*)
- ☐ Blue Loctite (*recommended*)


Number	QTY	Specifications	Torque (NM)
<u>1</u>	1	M10 x 80mm Allen Bolt	*
<u>2</u>	1	M10 x 45mm Allen Bolt	*
<u>3</u>	1	M10 x 35mm Allen Bolt	*
<u>4</u>	1	M10 x 30mm Allen Bolt	*
<u>5</u>	4	M6 x 20mm Allen Bolt	8
<u>6</u>	8	M6 x 20mm Tapered Allen Bolt	
<u>7</u>	4	M10 Washer	
<u>8</u>	4	M6 Washer	-
<u>9</u>	1	Ø20x11x5 Spacer	-
<u>10</u>	1	Ø20x11x15 Spacer	-
<u>11</u>	1	Ø20x11x54 Spacer	-

* PLEASE REFER TO THE OWNER'S (OR SERVICE) MANUAL FOR **OEM** TORQUE SPECIFICATIONS.*

STEP 1 (Install Mounting Brackets) :

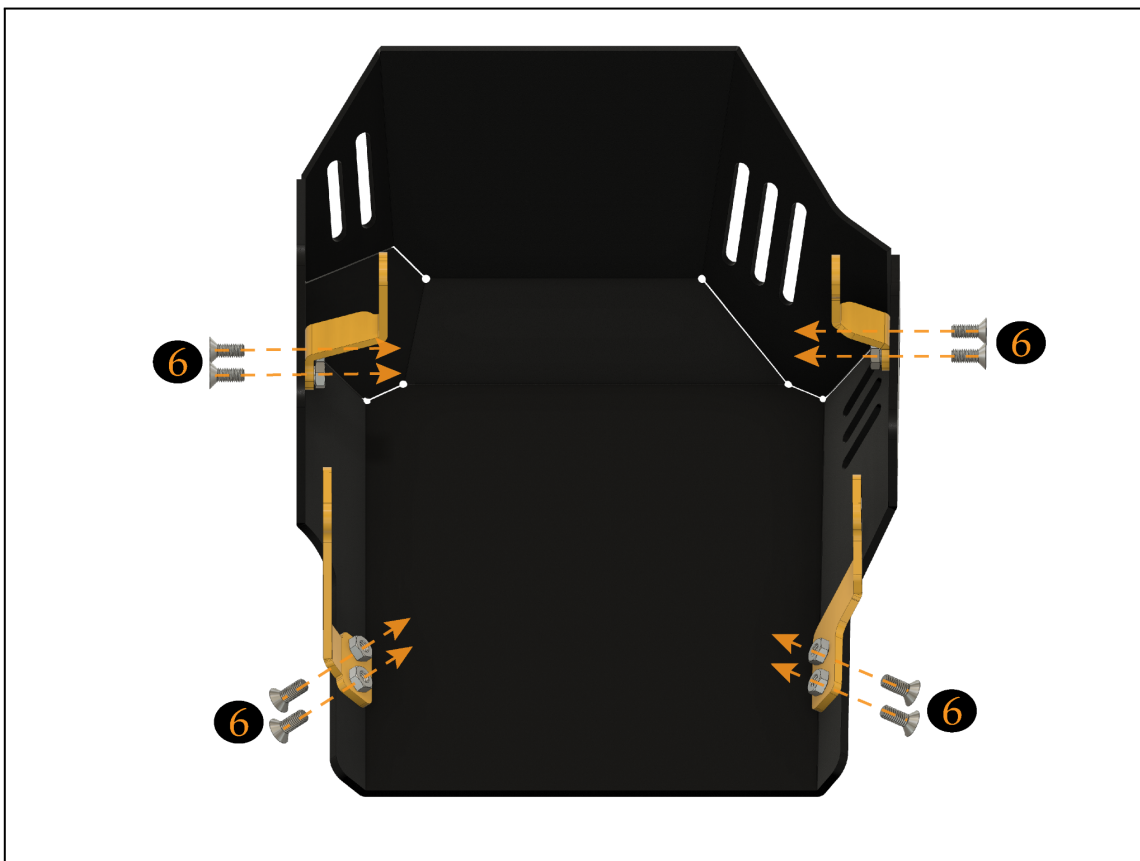


STEP 2 (Install Upper Skid Plate Mounts) :

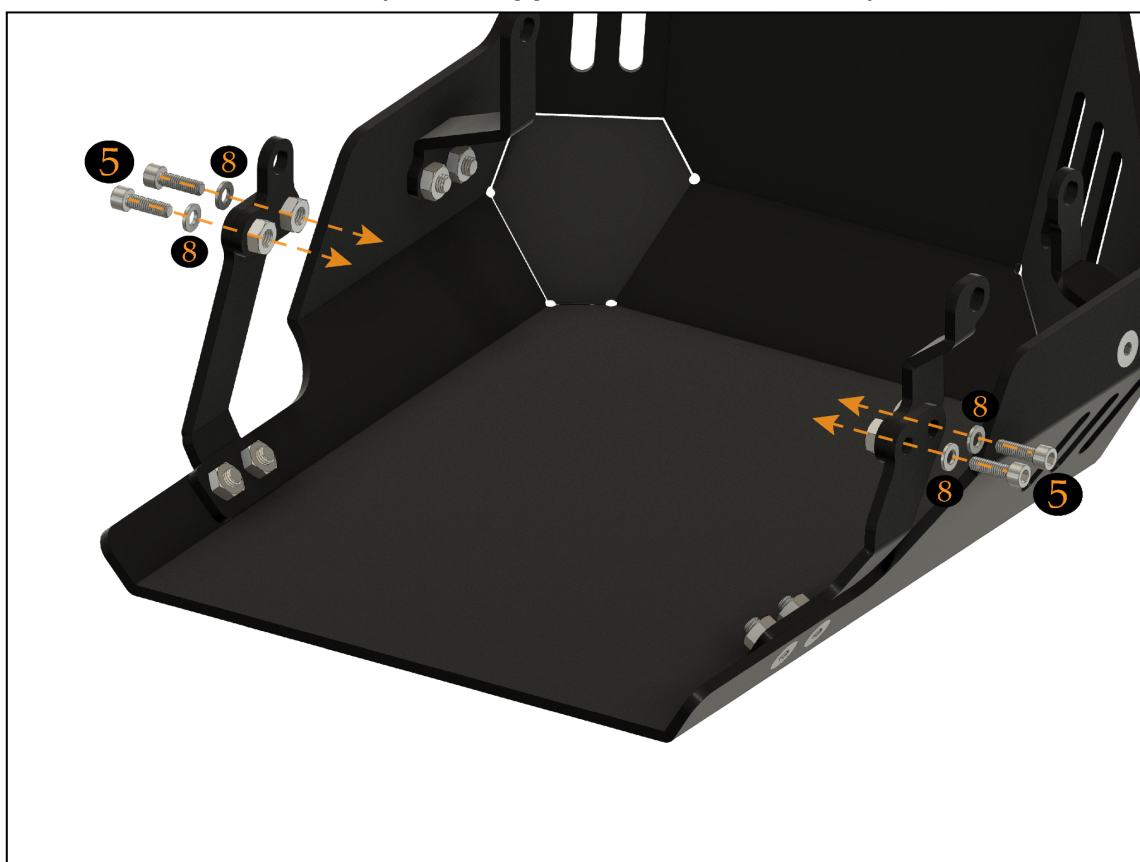


Skip this step if installing with Crash Bars

STEP 3 (Install Right Side Hardware) :

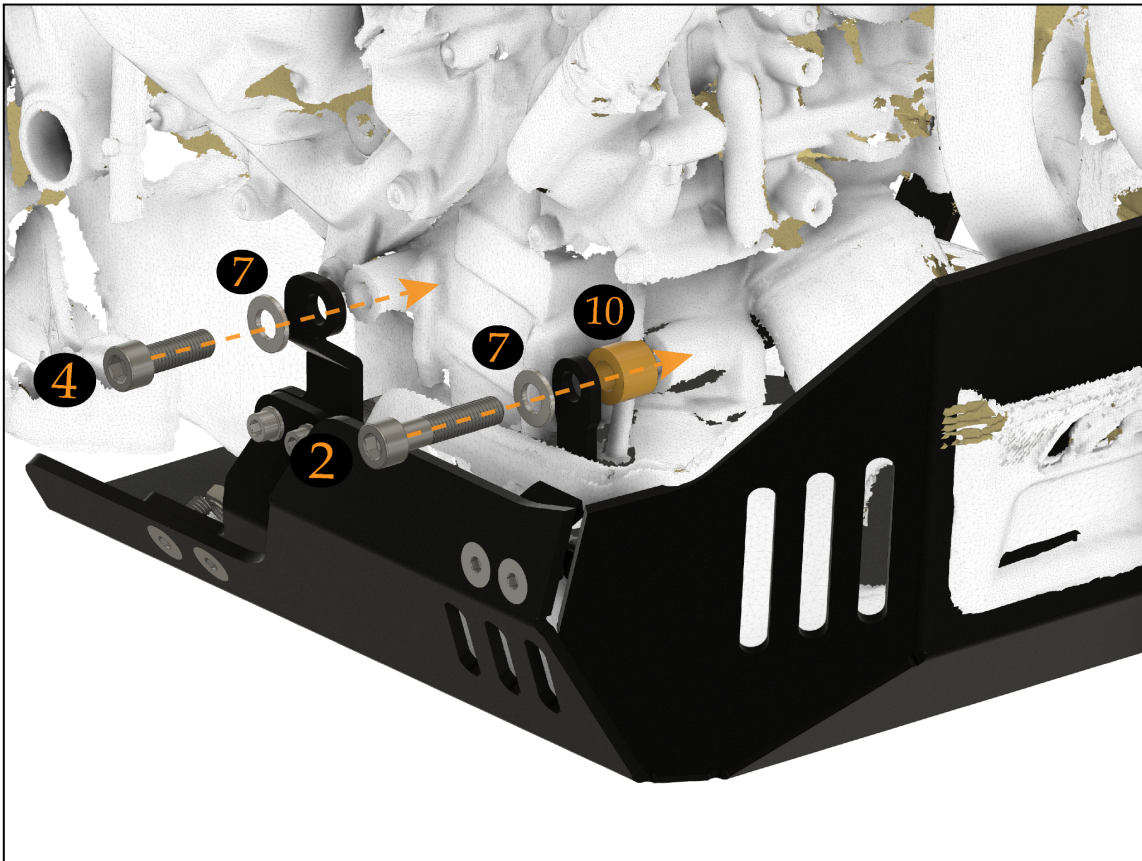

STEP 4 (Install Left Side Hardware) :

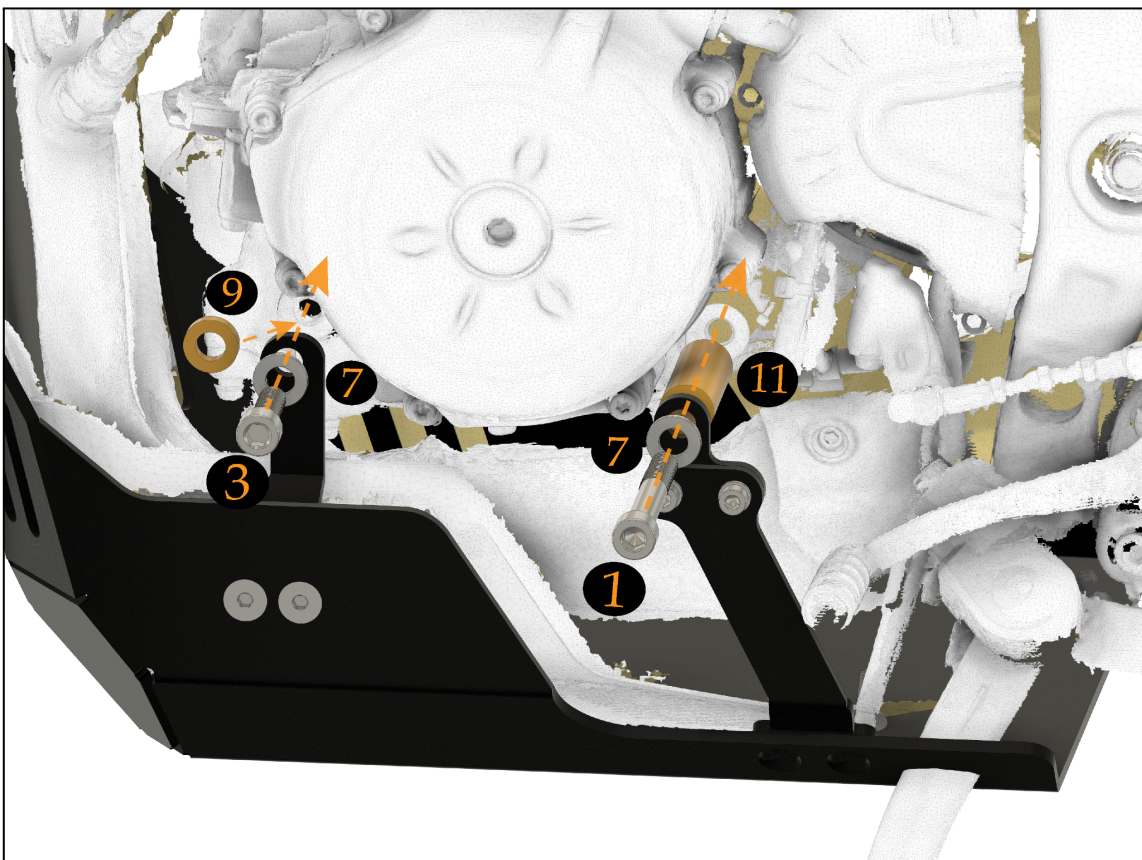

*** Torque Disclaimer ***

Torque specs provided by Outback Motortek are for guidance only and may reference OEM data. Incorrect torque application from miscalibrated or improperly stored torque wrenches (which can drift by up to 20% within 12 months) may cause broken studs or mounting failures. Always return torque wrenches to 0 ft-lbs when storing, and use blue Loctite (medium strength) on all fasteners to help prevent loosening. Outback Motortek is not responsible for damage or failures caused by mis-torquing or improper installation.