



**CONTACT
MOTORTECH**

BMW R 12 G/S

QUICK ASSEMBLY GUIDE | **ENGINE SHIELD**


Tools Required

Ratchet + Extension
T25 Torx Socket
3mm Allen Socket
Blue Loctite (recommended)

Number	QTY	Specifications	Torque (NM)
<u>1</u>	2	Long 20mm Spacer	-
<u>2</u>	1	Short 10mm Spacer	-
<u>3</u>	2	M5 x 35mm Allen Bolt	*
<u>4</u>	1	M5 x 30mm Allen Bolt	*
<u>5</u>	3	M5 Washer	-

* PLEASE REFER TO THE OWNER'S (OR SERVICE) MANUAL FOR **OEM** TORQUE SPECIFICATIONS.*

STEP 1:

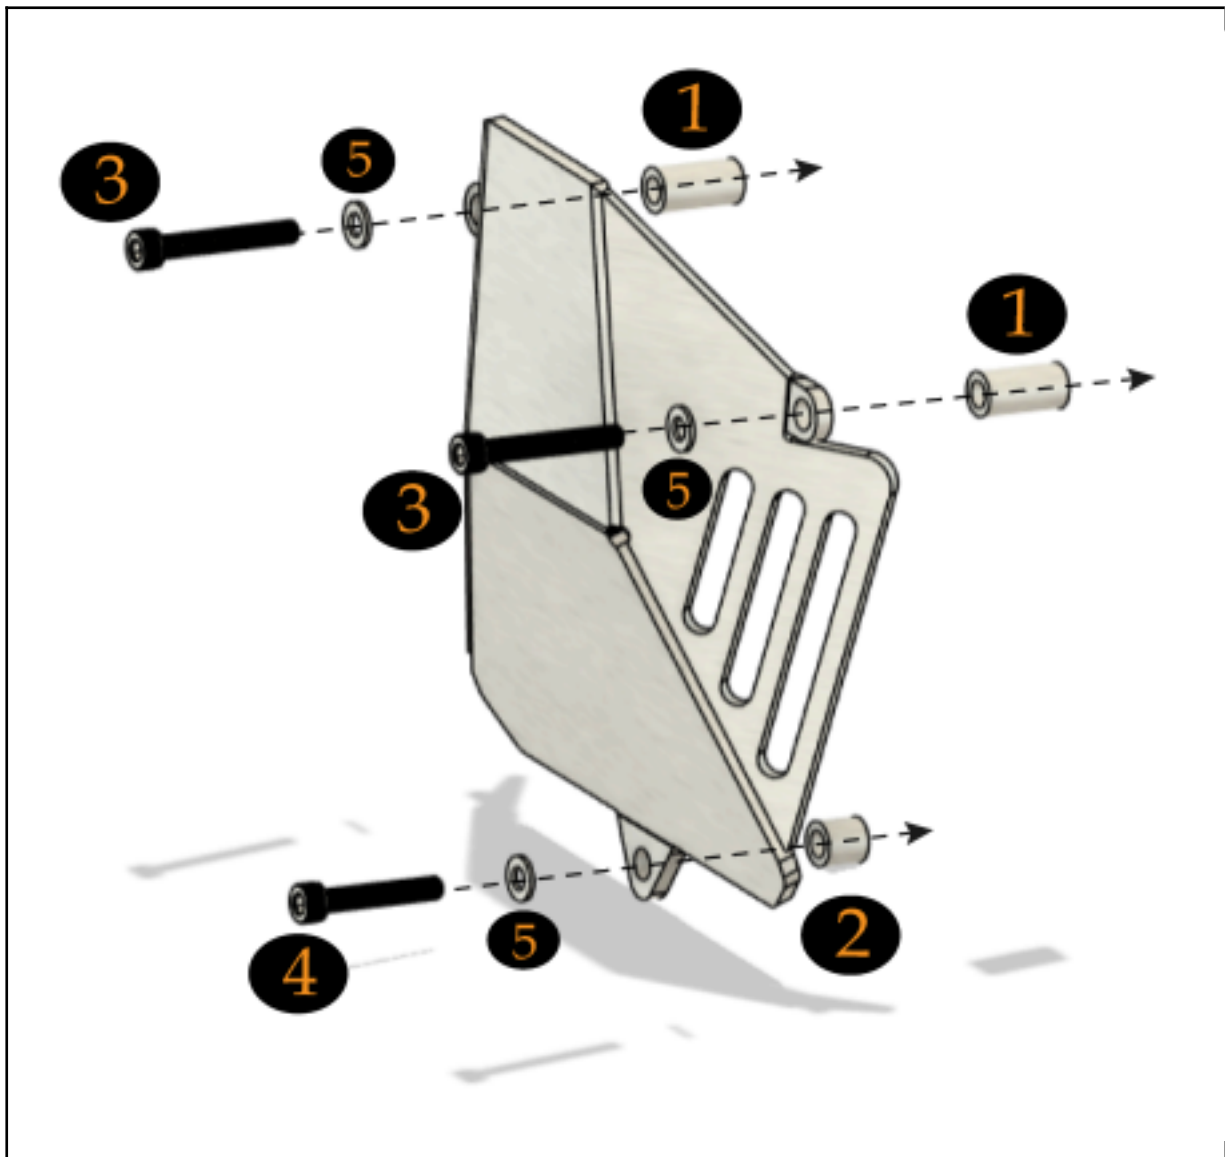

* Torque Disclaimer *

Torque specs provided by Outback Motortek are for guidance only and may reference OEM data. Incorrect torque application from miscalibrated or improperly stored torque wrenches (which can drift by up to 20% within 12 months) may cause broken studs or mounting failures. Always return torque wrenches to 0 ft-lbs when storing, and use blue Loctite (medium strength) on all fasteners to help prevent loosening. Outback Motortek is not responsible for damage or failures caused by mis-torquing or improper installation.