



**CUTECRUISE
MOTORCYCLES**

BMW R 12 G/S

QUICK ASSEMBLY GUIDE | RADIATOR GUARD


Tools Required

- ☐ Ratchet + Extension
- ☐ T25 Torx Socket
- ☐ 3mm Allen Socket
- ☐ Blue Loctite (recommended)

Number	QTY	Specifications	Torque (NM)
<u>1</u>	2	OEM Upper Radiator Bolt	-
<u>2</u>	2	OEM Lower Radiator Bolt	-
<u>3</u>	2	M5 x 25mm Allen Bolt	*
<u>4</u>	2	M5 x 20mm Allen Bolt	*
<u>5</u>	4	M5 Washer	-

* PLEASE REFER TO THE OWNER'S (OR SERVICE) MANUAL FOR **OEM** TORQUE SPECIFICATIONS.*

STEP 1:

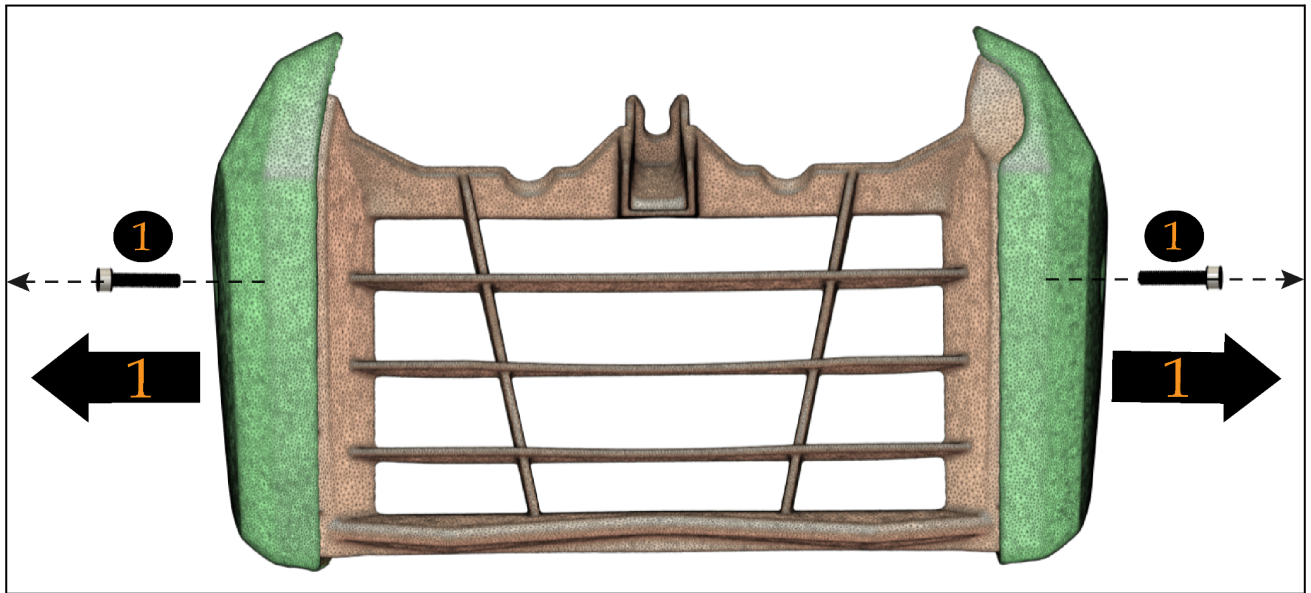


STEP 2:




* PLEASE REFER TO THE OWNER'S (OR SERVICE) MANUAL FOR **OEM** TORQUE SPECIFICATIONS.*

STEP 3:

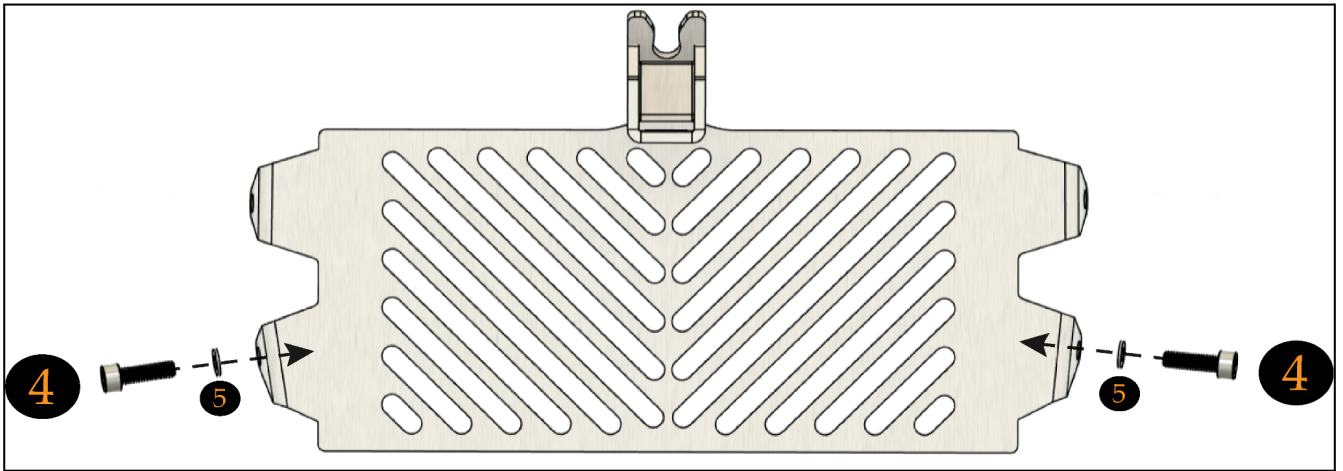

STEP 4:

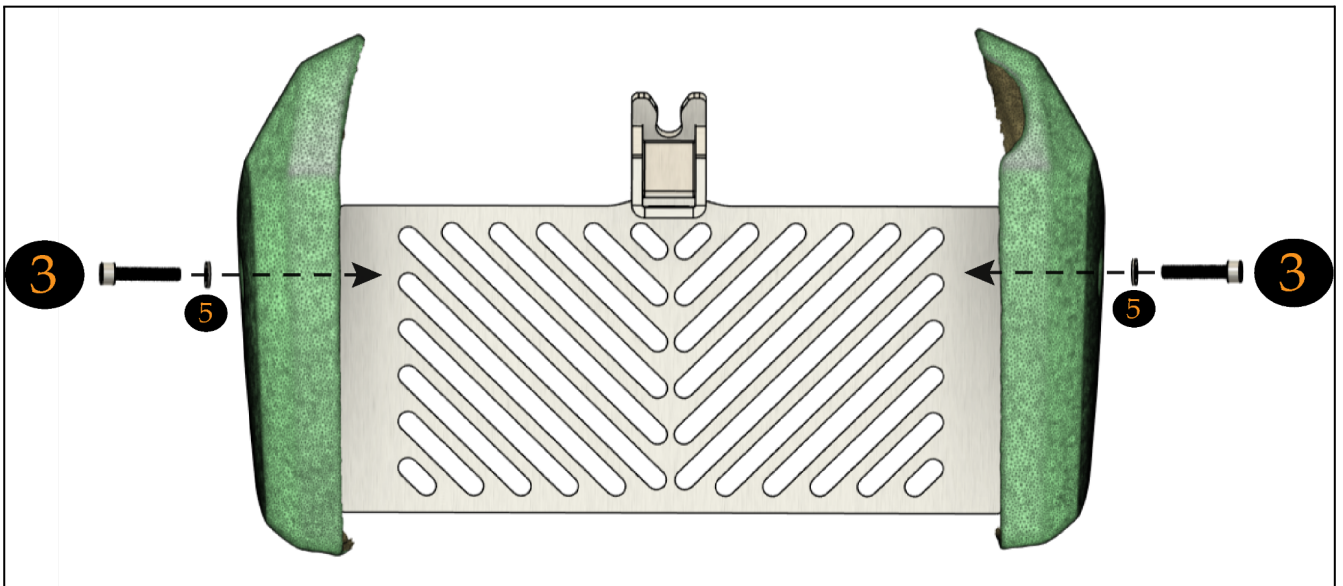

* Torque Disclaimer *

Torque specs provided by Outback Motortek are for guidance only and may reference OEM data. Incorrect torque application from miscalibrated or improperly stored torque wrenches (which can drift by up to 20% within 12 months) may cause broken studs or mounting failures. Always return torque wrenches to 0 ft-lbs when storing, and use blue Loctite (medium strength) on all fasteners to help prevent loosening. Outback Motortek is not responsible for damage or failures caused by mis-torquing or improper installation.