



CONTACT MOTORCYCLES

2026 Kawasaki KLE 500

ASSEMBLY GUIDE | [RACKLESS SUPPORT](#)

Tools Required

- ☐ Ratchet + Extension
- ☐ 5mm Allen Key / Socket
- ☐ 6mm Allen Key / Socket
- ☐ Torque Wrench (*recommended*)
- ☐ Blue Loctite (*recommended*)

If installing with Rear Rack Combo, please refer to last image


Number	QTY	Specifications	Torque (NM)
<u>1</u>	6	OEM Hardware	-
<u>2</u>	2	M8 x 75mm Allen Bolt	*
<u>3</u>	2	M8 x 60mm Allen Bolt	*
<u>4</u>	2	M8 x 55mm Allen Bolt	*
<u>5</u>	4	M8 x 50mm Allen Bolt	*
<u>6</u>	6	M8 Washer	-
<u>7</u>	2	25mm Spacer	-
<u>8</u>	2	35mm Spacer	-
<u>9</u>	4	OEM Spacer	-

* PLEASE REFER TO THE OWNER'S (OR SERVICE) MANUAL FOR **OEM** TORQUE SPECIFICATIONS.*


STEP 1 (Remove OEM Hardware) :




STEP 2 (Remove Foot Peg Hardware) :

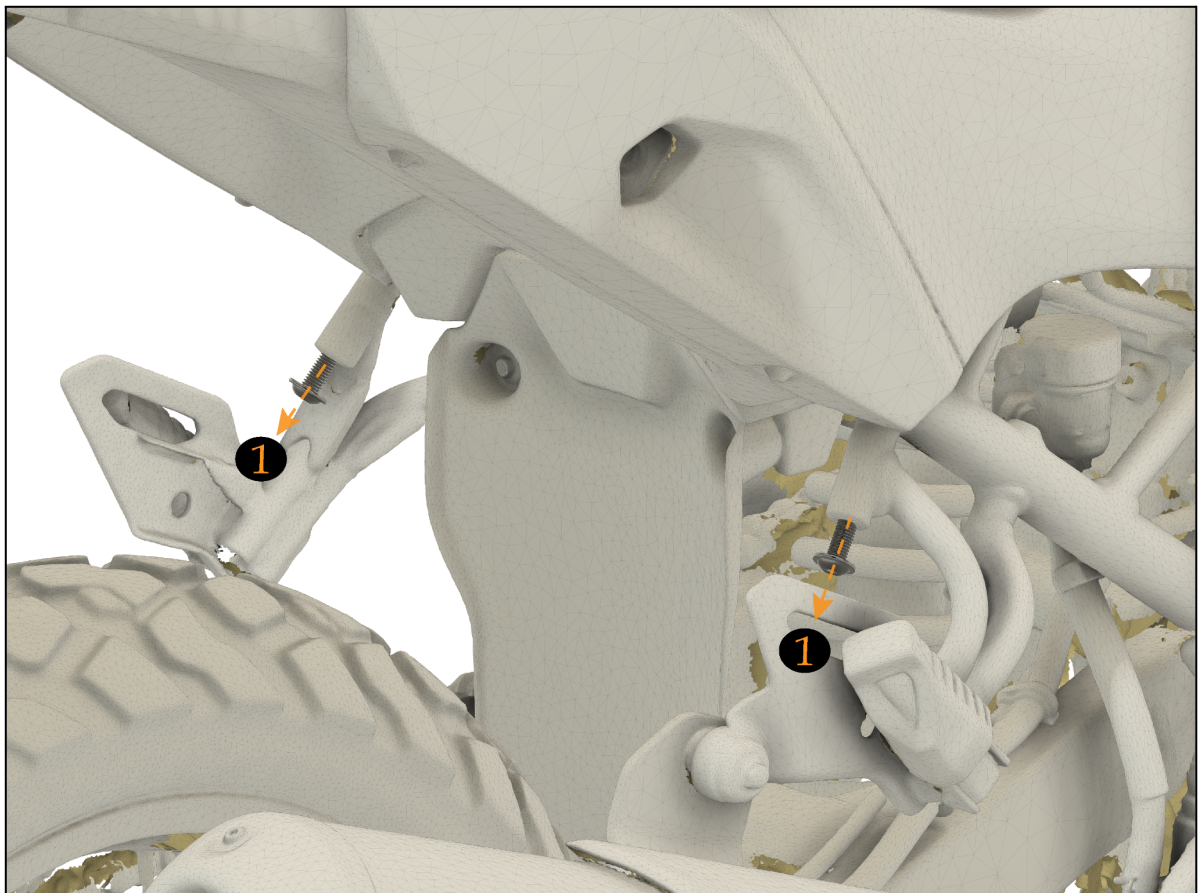


STEP 3 (Install Left Side Rackless Support) :

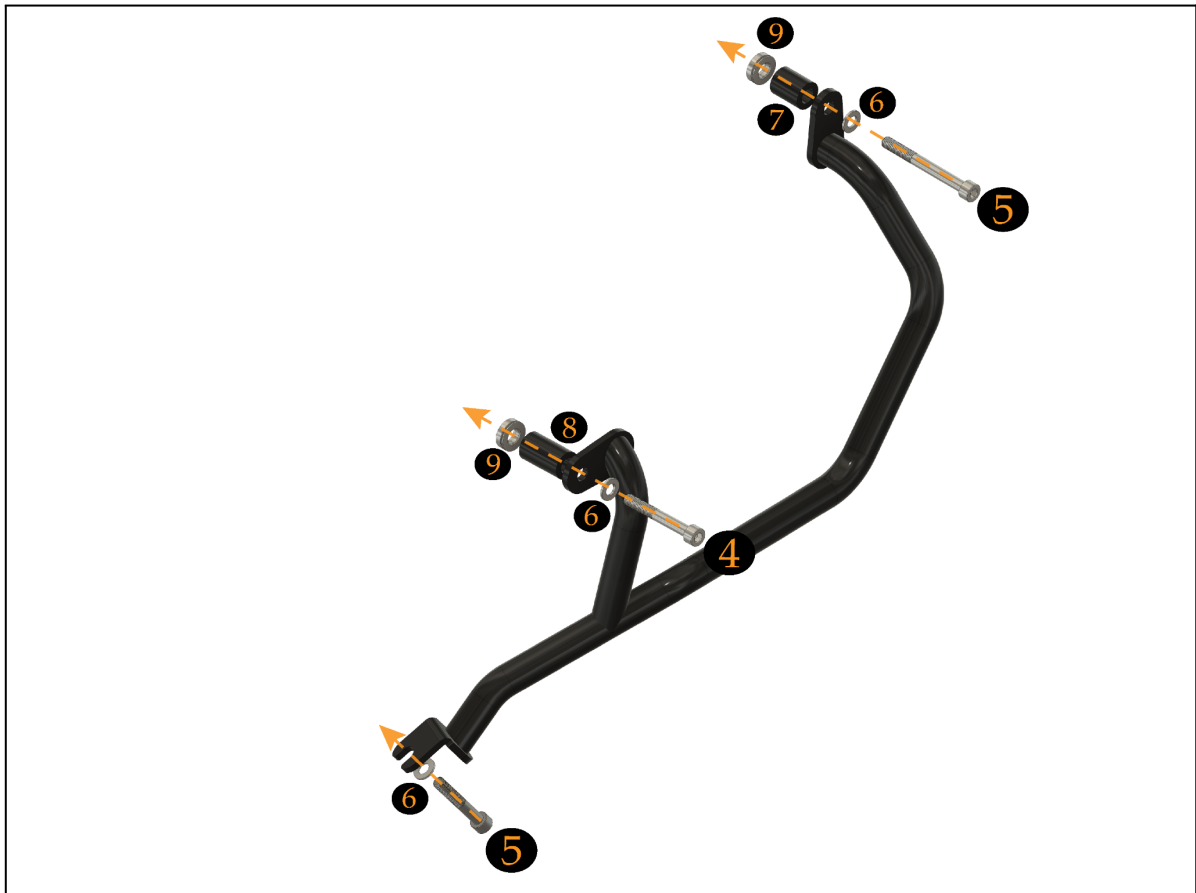

STEP 4 (Install Right Side Rackless Support) :

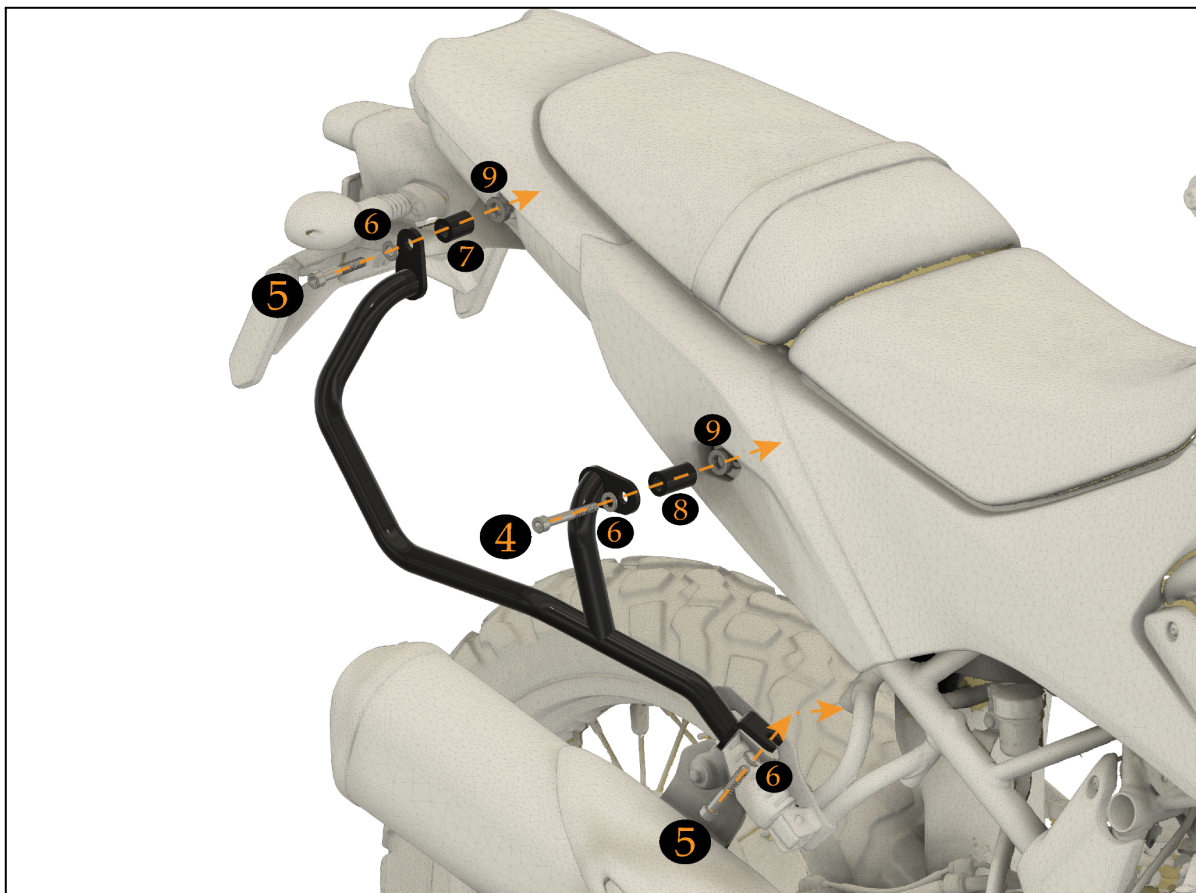

STEP 5 (Install Rackless Support + Rear Rack Combo - L + R Identical) :

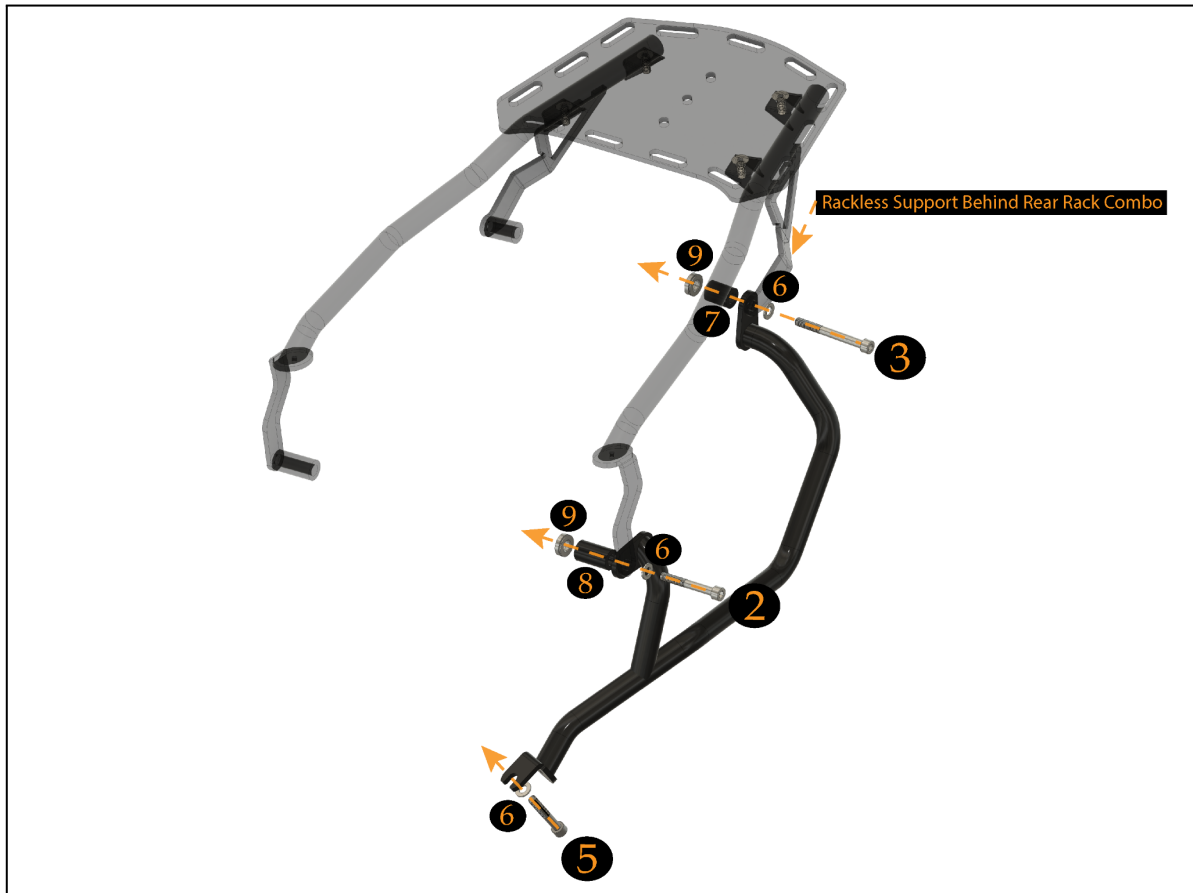

*** Torque Disclaimer ***

Torque specs provided by Outback Motortek are for guidance only and may reference OEM data. Incorrect torque application from miscalibrated or improperly stored torque wrenches (which can drift by up to 20% within 12 months) may cause broken studs or mounting failures. Always return torque wrenches to 0 ft-lbs when storing, and use blue Loctite (medium strength) on all fasteners to help prevent loosening. Outback Motortek is not responsible for damage or failures caused by mis-torquing or improper installation.