



**CUTTER
MOTOR**

Kove 450 Rally

QUICK ASSEMBLY GUIDE | RADIATOR GUARD


Tools Required

- ☐ Ratchet + Extension
- ☐ 5mm Allen
- ☐ Blue Loctite (recommended)


Number	QTY	Specifications	Torque (NM)
<u>1</u>	4	M6, 20mm Length Fully Threaded, Allen Head	*
<u>2</u>	8	M6 Washer	-
<u>3</u>	4	M6 Nyloc Nut	
<u>4</u>	5	Push -In Rubber Grommet	-

* PLEASE REFER TO THE OWNER'S (OR SERVICE) MANUAL FOR **OEM** TORQUE SPECIFICATIONS.*

STEP 1 :

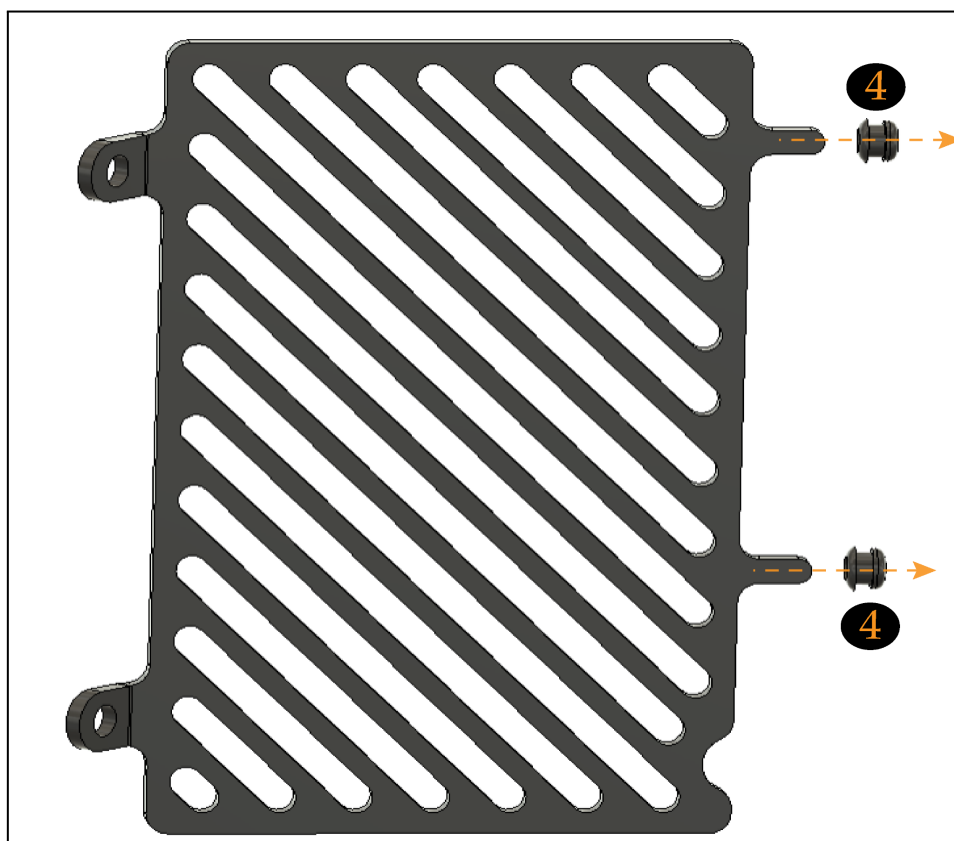


STEP 2 (Left Side) :

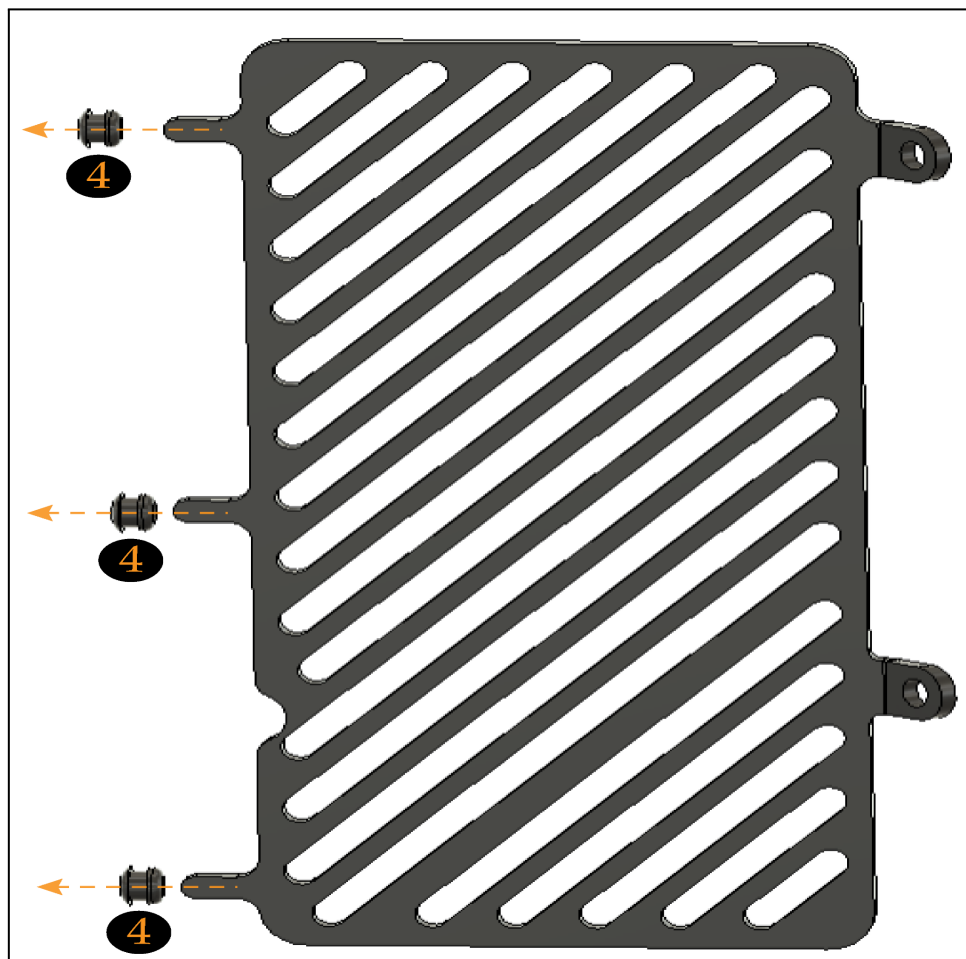

* PLEASE REFER TO THE OWNER'S (OR SERVICE) MANUAL FOR **OEM** TORQUE SPECIFICATIONS.*

STEP 3:

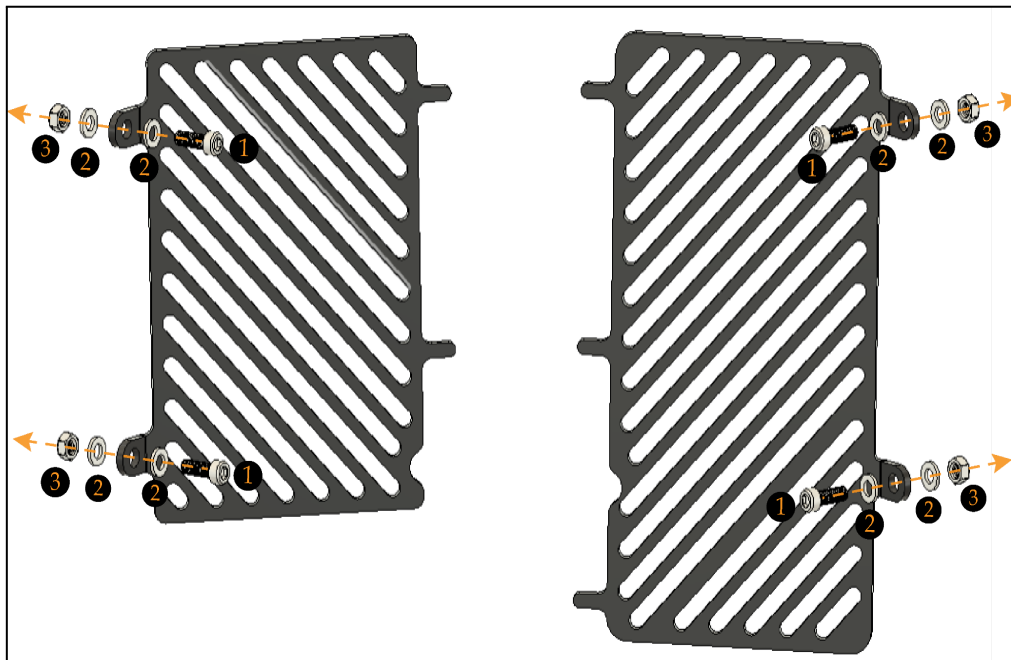

*** Torque Disclaimer ***

Torque specs provided by Outback Motortek are for guidance only and may reference OEM data. Incorrect torque application from miscalibrated or improperly stored torque wrenches (which can drift by up to 20% within 12 months) may cause broken studs or mounting failures. Always return torque wrenches to 0 ft-lbs when storing, and use blue Loctite (medium strength) on all fasteners to help prevent loosening. Outback Motortek is not responsible for damage or failures caused by mis-torquing or improper installation.