



CULT EQUIPMENT
INCORPORATED

Kove 800 X

QUICK ASSEMBLY GUIDE | **CRASH BARS**


Tools Required

- ☐ Ratchet + Extension
- ☐ 5mm Allen Socket
- ☐ 6mm Allen Socket
- ☐ 8mm Allen Socket
- ☐ 10mm Wrench / Spanner
- ☐ T50 Torx Bit
- ☐ Blue Loctite (recommended)

Number	QTY	Specifications	Torque (NM)
<u>1</u>	1	M8 x 80mm Allen Bolt	*
<u>2</u>	1	M8 x 70mm Allen Bolt	*
<u>3</u>	2	M8 x 45mm Allen Bolt	23
<u>4</u>	6	M6 x 20mm Allen Bolt	10
<u>5</u>	4	OEM Bolt	*
<u>6</u>	8	M8 Washer	-
<u>7</u>	12	M6 Washer	-
<u>8</u>	6	M6 Nyloc Nut	-
<u>9</u>	1	5mm Spacer	-

* PLEASE REFER TO THE OWNER'S (OR SERVICE) MANUAL FOR OEM TORQUE SPECIFICATIONS.*

STEP 1:

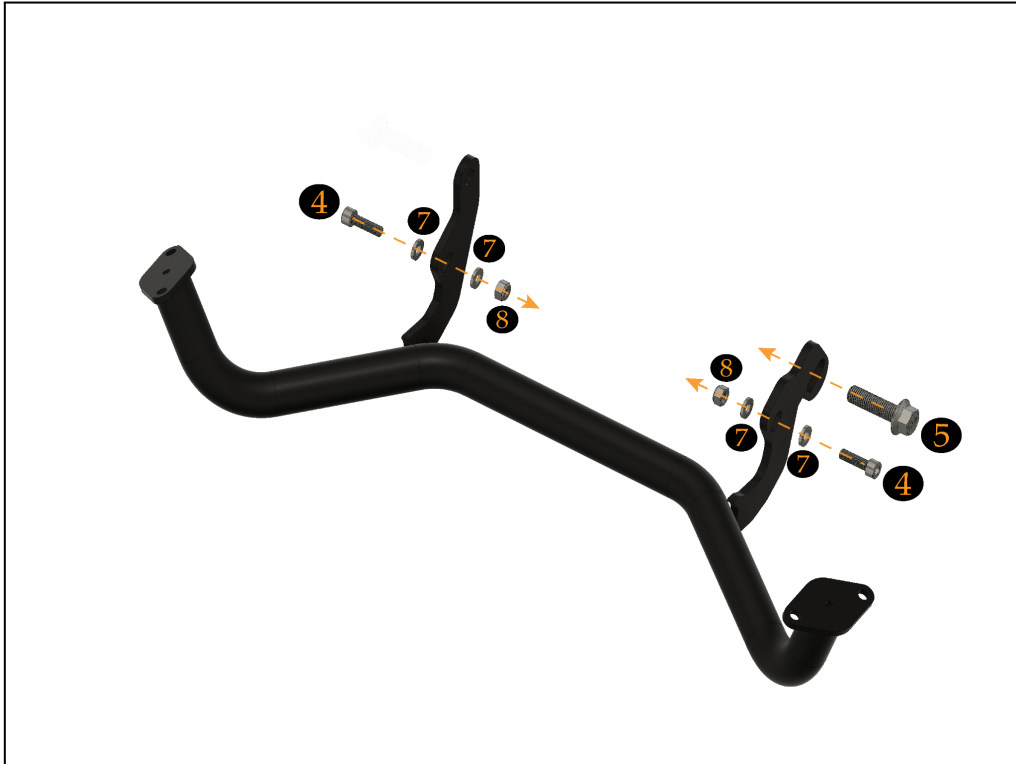

STEP 2:




* PLEASE REFER TO THE OWNER'S (OR SERVICE) MANUAL FOR OEM TORQUE SPECIFICATIONS.*

STEP 3 (Right Side - Identical):



STEP 4:

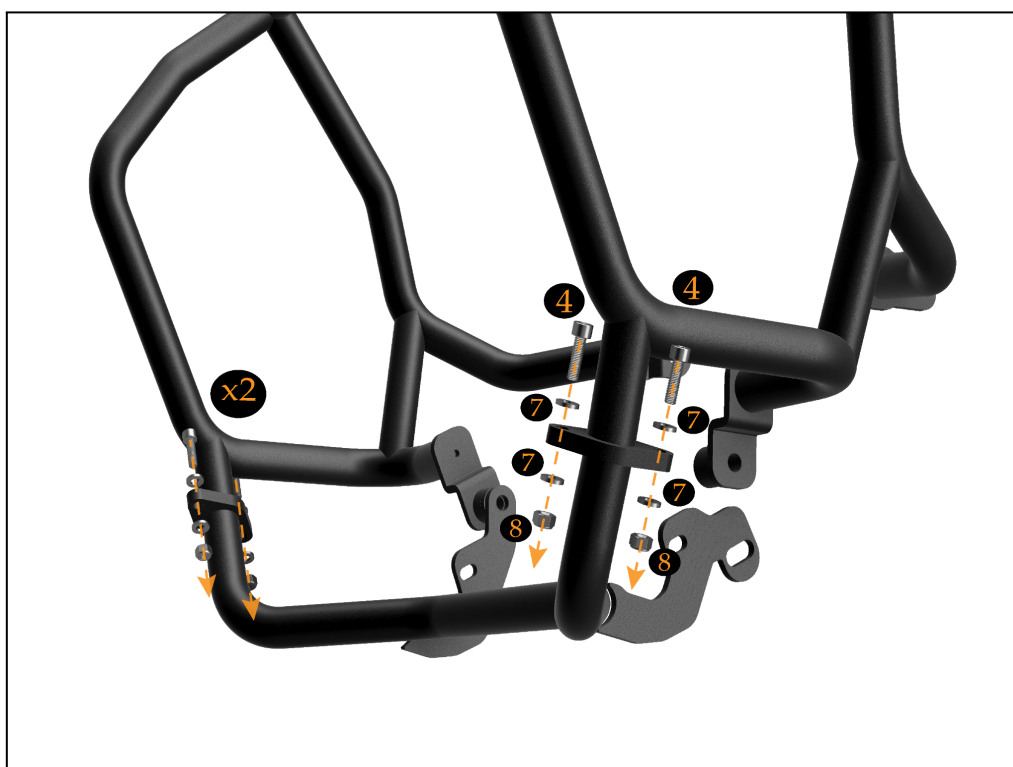

* Torque Disclaimer *

Torque specs provided by Outback Motortek are for guidance only and may reference OEM data. Incorrect torque application from miscalibrated or improperly stored torque wrenches (which can drift by up to 20% within 12 months) may cause broken studs or mounting failures. Always return torque wrenches to 0 ft-lbs when storing, and use blue Loctite (medium strength) on all fasteners to help prevent loosening. Outback Motortek is not responsible for damage or failures caused by mis-torquing or improper installation.