



CJT FABRIC
MOTORCYCLES

2025/26 Yamaha Ténéré 700

(2025 + for European models, 2026+ for North American models)

ASSEMBLY GUIDE | HEADLIGHT GUARD


Tools Required

- ☐ Ratchet + Extension
- ☐ 4mm Allen Key / Hex Socket (*for M5 hardware*)
- ☐ Torque Wrench (*recommended*)
- ☐ Blue Loctite (*recommended*)


Number	QTY	Specifications	Torque (NM)
<u>1</u>	4	OEM Hardware	-
<u>2</u>	4	M5 x 20mm Allen Bolt	*
<u>3</u>	4	M5 Washer	-
<u>4</u>	2	5mm Spacer	-
<u>5</u>	1	Headlight Guard Grommet	-

* PLEASE REFER TO THE OWNER'S (OR SERVICE) MANUAL FOR **OEM** TORQUE SPECIFICATIONS.*


STEP 1 (Remove OEM Hardware) :

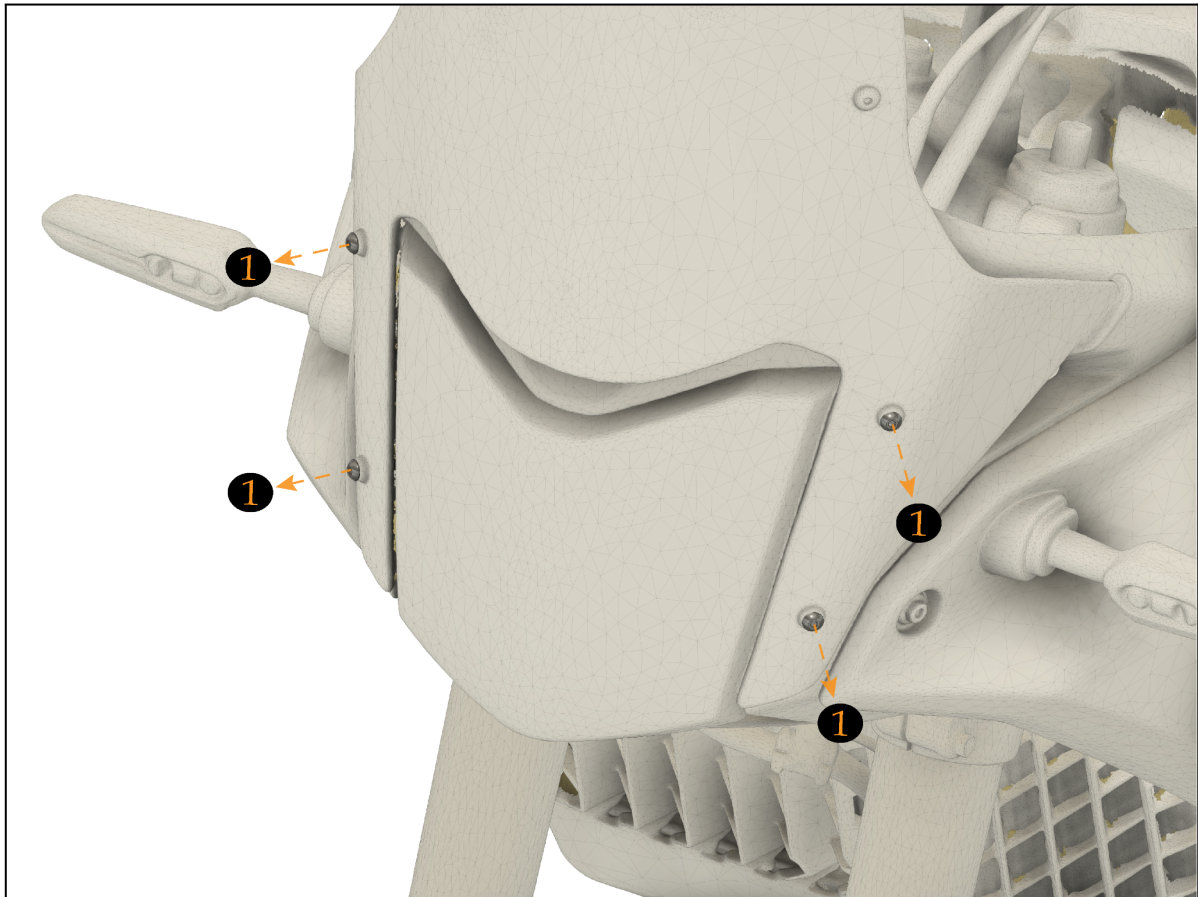

STEP 2 (Install Grommet) :

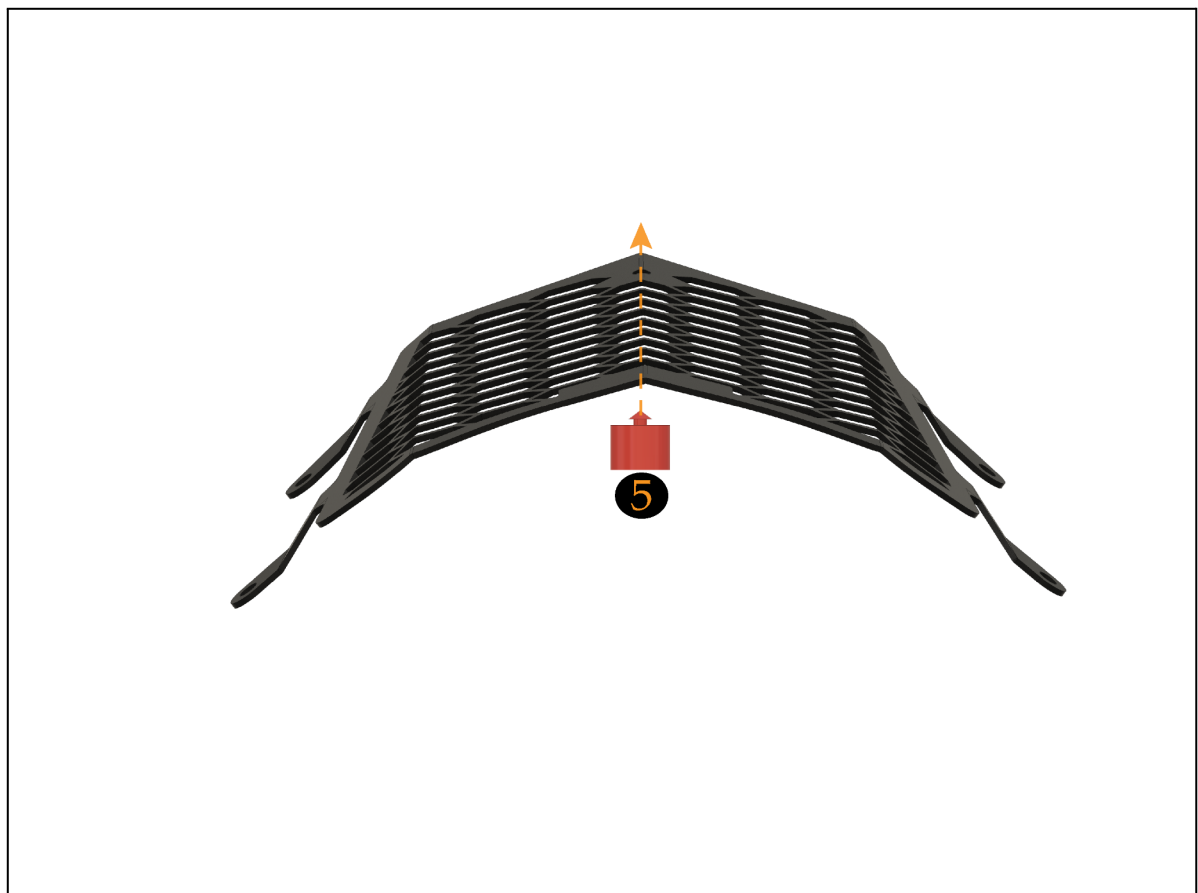

STEP 3 (Install Headlight Guard Hardware) :

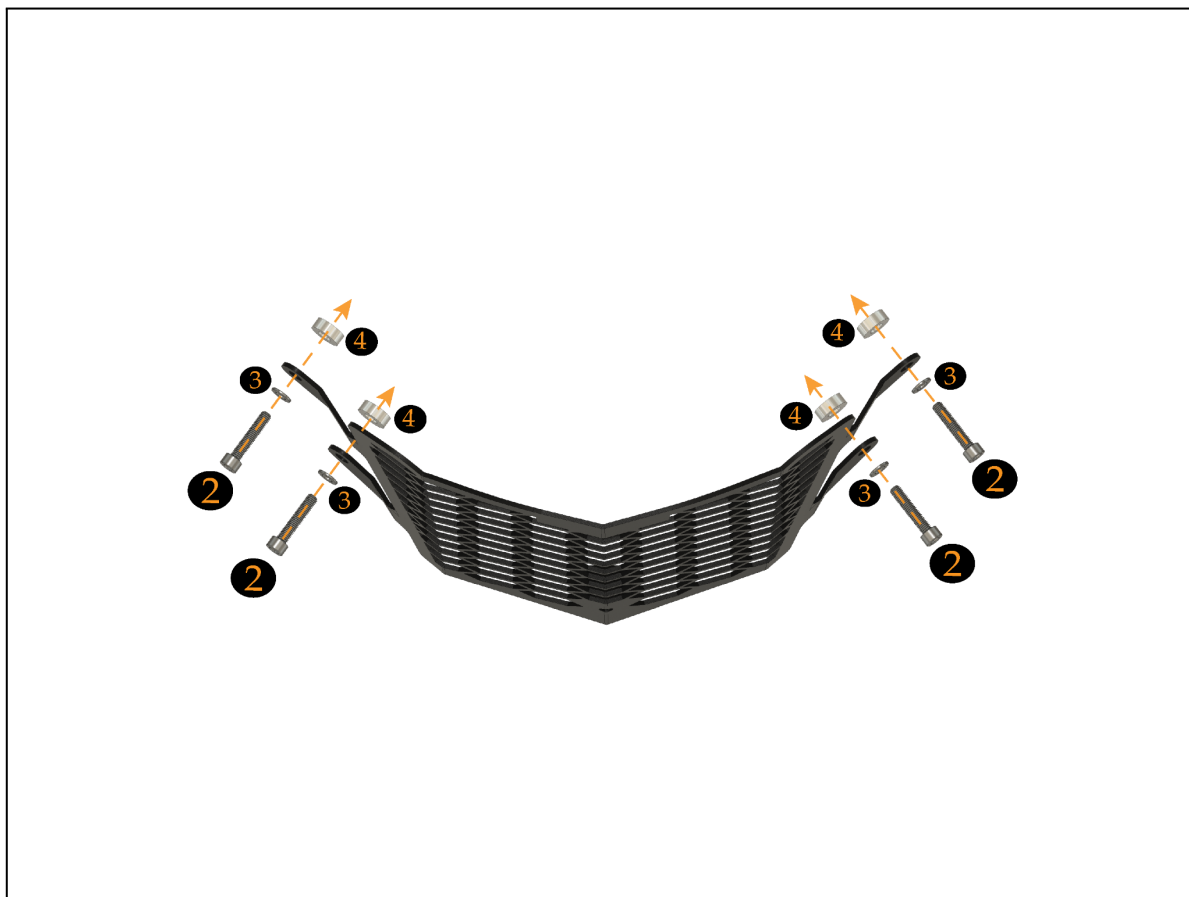

* Torque Disclaimer *

Torque specs provided by Outback Motortek are for guidance only and may reference OEM data. Incorrect torque application from miscalibrated or improperly stored torque wrenches (which can drift by up to 20% within 12 months) may cause broken studs or mounting failures. Always return torque wrenches to 0 ft-lbs when storing, and use blue Loctite (medium strength) on all fasteners to help prevent loosening. Outback Motortek is not responsible for damage or failures caused by mis-torquing or improper installation.